



# M-11/9 and M-11A1 Competition Trigger Full Auto Only


## Installation instructions:

This procedure requires average skills. Read instructions completely before proceeding. In general the procedure is to remove the existing trigger, trigger spring and trip from the lower receiver and installing the new competition trigger.

## Tools required:

Small flat head screwdriver  
5/32" punch or rod  
.028" Allen wrench (provided)  
Blue Loctite #242

## Identification of parts:

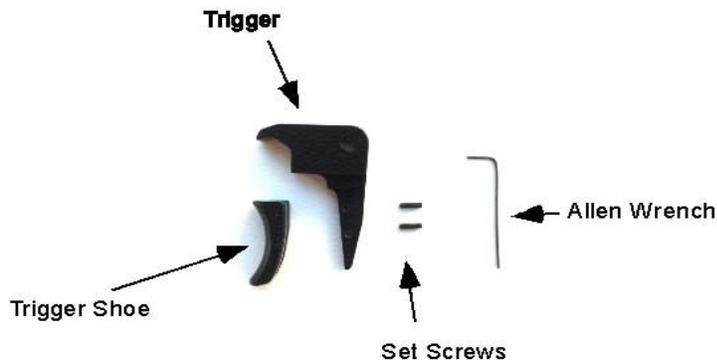

## Removal of trigger:

- 1) Lift trigger pin retaining spring, depress sear and slide out selector/sear pin from left side of gun.
- 2) Remove sear and sear spring.
- 3) Remove trip.
- 4) Hold trigger forward and use a small screw driver to un-hook trigger spring from bottom of trigger.
- 5) Make sure trigger pin retaining spring is clear of trigger pin and push out trigger pin from right side of gun.
- 6) Lift out trigger and trigger spring.

## Installation:

**NOTE: Trigger spring is not used with the Full Auto Only Trigger.  
Trip is not required to be re-installed.**

- 1) Make sure Trigger Pin Retaining Spring is still located on the left side of the receiver with the hook end resting on top of feedramp.
- 2) Place trigger in lower receiver.
- 3) Install trigger pin from left side of gun through trigger.

4) Lift front of trigger pin retaining spring and insert selector/sear pin in sear pin hole until it protrudes enough for the spring to rest on it.

- 5) Make sure sear spring is attached to sear and install sear. Hook the rear of the sear underneath the trigger. Push the sear down, aligning the front with the sear stud. Align the hole so the selector/sear pin can slide through the sear. Slide the selector/sear pin through the left side of the gun. Make sure the trigger retaining spring rests in the slot in the selector/sear pin. Insert a 5/32" punch into the hole in the top of the sear to insure the sear spring is properly aligned.

- 6) Place trigger shoe over trigger, aligning holes.

7) Place one of the #1-64 set screws on the provided .028" Allen wrench and put a small drop of Blue Loctite 242 on the end.

8) Install the set screw into one of the trigger shoe holes and thread into the trigger. Leave loose so other hole can be aligned.

- 9) Repeat steps 9 and 10 for other set screw.

10) Finish tightening screws. After screw is snug, torque the Allen wrench another 1/8 of a turn. Do not overtighten.

# REFERENCE

Trigger Pin Retaining Spring



Trigger Pin



Selector/Sear Pin



Trip



Trigger Spring



Disconnecter



Sear



Trigger



Sear Spring

